


IMPORTANT: PLEASE READ.

UNPACK AND INSPECT THE PRODUCT FOR ANY DAMAGE. IF YOU FIND DAMAGE, DO NOT INSTALL. CONTACT YOUR PLACE OF PURCHASE. IF YOU REQUIRE ASSISTANCE OR HAVE QUESTIONS INSTALLING YOUR MIRROR, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT 718-366-1966. WE RECOMMEND CONSULTING A PROFESSIONAL IF YOU ARE UNFAMILIAR WITH THE INSTALLATION OF BATHROOM FIXTURES. WE RECOMMEND ALL ELECTRICAL CONNECTIONS TO BE COMPLETED BY A LICENSED PROFESSIONAL. SOFIA MEDICINE CABINETS ACCEPTS NO LIABILITY FOR ANY DAMAGE TO THE WALL MIRROR OR FOR PERSONAL INJURY DURING INSTALLATION.

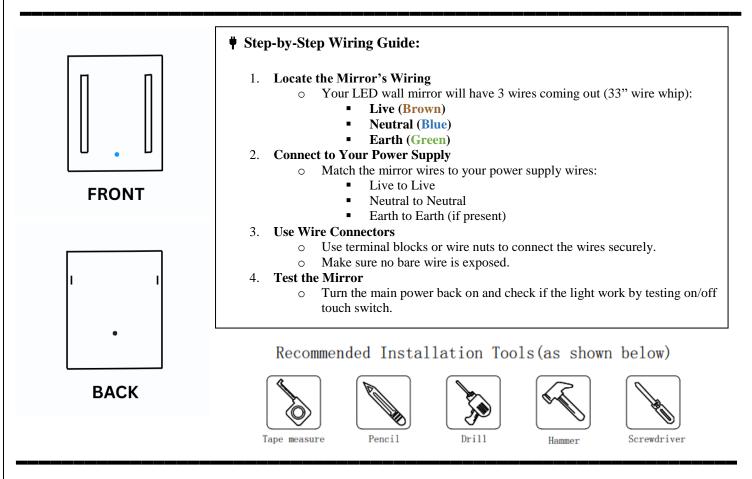

1. During operation, never put hard or sharp materials directly against the mirror surface, or otherwise, it may result in damage to the glass. Never place mirror surface face down.

2. Unpack the mirror and check the box thoroughly for all hardware and loose parts.

3. This mirror is for indoor use only. Observe all local electrical and building codes.

4. DANGER: RISK OF ELECTRIC SHOCK. Disconnect power before any installation of this item.

5. Level and mark holes for installation on wall. Locate studs and drill two holes. If no studs are available, utilize wall anchors. Anchor holes on back of mirror are located 9" down from top of mirror on back (each side).

6. Use only a damp cloth to clean mirror. Ammonia or vinegar-based cleansers will damage this product. A 50/50 solution of water and isopropyl alcohol is recommended for cleaning this product. When applying, remember to spray or wet the cloth, not the mirror itself or surrounding surfaces. Do not use abrasive

